

CHECK EVERY MONTH



-  **OIL LEVEL**
Add oil if low, and check for leaks.
-  **HOSES***
Replace if bulging, rotten or brittle.
-  **BELTS***
Replace if worn, frayed or glazed.
-  **TIRE PRESSURE**
Add air if too low.
-  **COOLANT OR ANTIFREEZE***
Add if low, and check for leaks.
-  **AIR FILTER**
Replace if dirty.
-  **INSPECT TIRES**
For damage, bulges or uneven wear.

CHECK EVERY 3 MONTHS



-  **OIL AND OIL FILTER***
Change every 3,000 miles or as recommended by manufacturer.
-  **WINDSHIELD WASHER FLUID**
Add fluid if low.
-  **POWER STEERING FLUID**
Add fluid if low.
-  **TRANSMISSION FLUID***
Add fluid if low.
-  **BATTERY TERMINALS AND CABLES**
Clean if corroded.
-  **LIGHTS**
Ensure all lights and turn signals work.

CHECK EVERY 6 MONTHS



-  **WIPER BLADES**
Replace if worn, brittle or smeary.
-  **HORN**
Test and make sure it works.
-  **BRAKES***
Inspect for unusual wear and tear.
-  **SPARE TIRE**
Make sure it's fully inflated.
-  **EXHAUST SYSTEM***
Inspect for rust, damage, or loose parts.
-  **SHOCKS***
Inspect for oil seepage or wear.